


# ULTRASEAL SYSTEM BUILD-UP



## VERTICAL & WINDOW, DOOR TERMINATION

### VERTICAL TERMINATION


Where waterproofing on upstands and columns will be terminated on the vertical, a 5 mm wide x 5 mm deep termination groove must be cut into the wall to allow for successful anchoring of the waterproofing system.

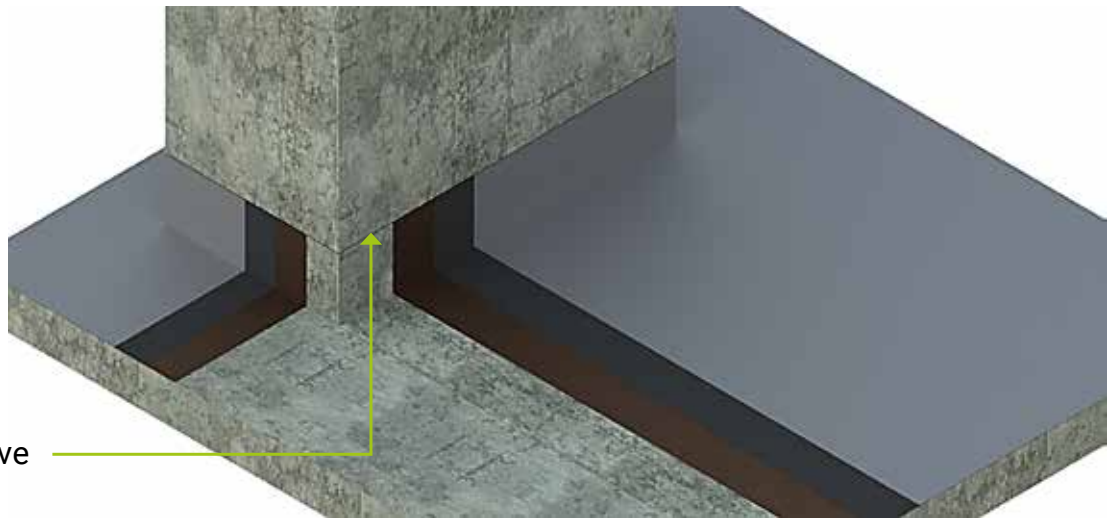

Termination Groove

### WINDOW / DOOR TERMINATION

Termination must be finished with a Polyurethane bead along the bottom interface.

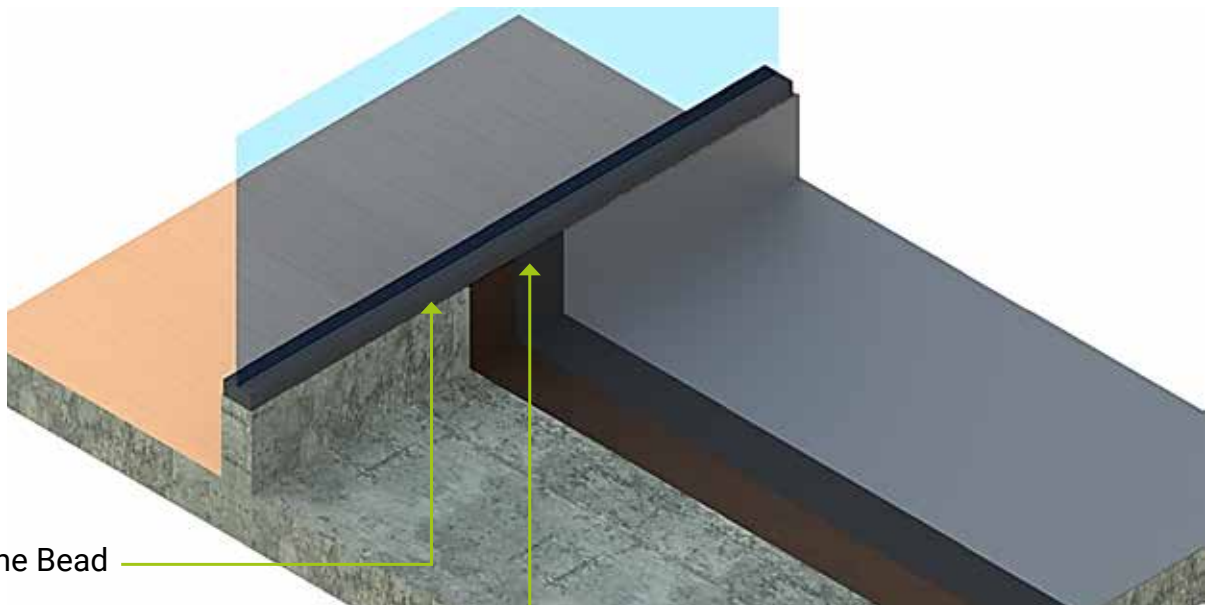

Polyurethane Bead

Waterproofing Tucked In  
Under The Window / Door Frame